Excellence Industries

Profit from the Power of Partnership.

User manual









To ensure safe operation, please read this user manual thoroughly before use.

Welcome to your new Excellence product


Thank you for buying this Excellence Cooler. It has been designed and manufactured for years of trouble-free service. Operation is very simple, but please take a few minutes to read this booklet. It contains important safety information, and tips to ensure you receive the best possible service from your Excellence Cooler.
This appliance is intended to be used for the storage of beverages and food.

CONTENTS

Important Notes....3
Warning! Risk of electrical shock hazard 3
Disposal of old refrigerators 3
Disposal of packaging 3
Safety instructions and warnings 3
Product description 4
Reversing the door hinge 5
How to minimise the energy consumption of your cooler 5
Basic operation 5
Thermostat settings 6
Changing the LED light bulb 6
When not in use 7
Defrosting 7
Cleaning 7
Moving your cooler 7
Power failure 7
Troubleshooting 8

WARNING:THE METAL RAILS ON THE BOTTOM UNDERNEATH OF THIS COOLER MAY HAVE SHARP EDGES, SO ALWAYS UNPACK AND HANDLE WITH CARE.

DO NOT DRAG THE UNIT: PLACE CAREFULLY IN POSITION TO AVOID THE SCRATCHING OF SURFACES.

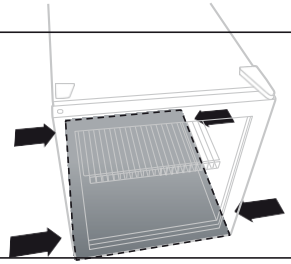

Note:
1.This equipment is intended for the storage and display of packaged products only.
2.This equipment is intended for use in an area where the environmental conditions are not exceed 80 °F (27 °C).

HUCombinedalldomesticmodelsmanual1117.indd2 30/11/201709:19

ImportantNotes



Hazard.

WARNING: RISK OF ELECTRICAL SHOCK HAZARD

USERS IN EUROPE: This unit must be earthed. If the power cable is damaged, it must be replaced by a qualified engineer to avoid shock
DO NOT ATTEMPT TO SERVICE THE ITEM YOURSELF. Ensure that the appliance is properly earthed. Stop using the appliance immediately if electric shock is felt when touching the cooler.

DISPOSAL OF OLD REFRIGERATORS

BE SURE TO MAKE ANY LOCKS UNUSABLE. IF POSSIBLE, REMOVE THE DOOR(S) AND DISCARD SEPARATELY.
WARNING–CHEMICAL HAZARD: DO NOT ALLOW CHILDREN TO PLAY WITH THE OLD APPLIANCE. CONTACT YOUR LOCAL AUTHORITY FOR PROPER DISPOSAL PROCEDURES.
Before disposing of an old appliance, please make sure it is switched off and safe. Unplug the appliance and break any locks in order to avoid children becoming trapped.
Please note: the cooling system contains gases and refrigerants which require specialist waste disposal. The valuable materials contained in a refrigerator can be recycled.
Contact your local waste disposal depot for proper disposal of an old appliance and contact your local authority or dealer if you have any questions.
Please ensure the pipe work of your cooler is not damaged prior to disposal. You can contribute to environmental awareness by insisting on an appropriate non-polluting method of disposal.

DISPOSAL OF PACKAGING

All the packaging materials with your Excellence Cooler may be disposed of without danger to the environment.
The cardboard carton and polythene wrappers are fully recyclable–check with your local authority for the best recycling options. The expanded polystyrene materials included in the packaging can be placed in general waste.

SAFETY INSTRUCTIONS & WARNINGS

Before switching on your Excellence Cooler, read the information in this User Manual carefully. The User Manual contains important observations relating to the assembly, operation and maintenance of the appliance.
Please keep this booklet in a safe place for future reference. If you ever sell this unit, hand this User Manual to the new owner.
The manufacturer does not accept responsibility for any damages that may arise due to non-observation of these instructions.



WARNING: When positioning the appliance ensure the supply cord is not trapped or damaged. Do not locate extension sockets or charging transformers/power supplies adjacent to the compressor at the back of the unit, as they could over heat.


HUCombinedalldomesticmodelsmanual1117.indd3 30/11/201709:19


- Do not use damaged appliances. If you are in any doubt, consult the supplier.
- Connection and installation of the unit is to be carried out in strict compliance with the relative instructions in this User Manual.
- For safety, the appliance must be properly earthed in accordance with specifications.
- Always remember to unplug the appliance before cleaning. Never unplug your cooler by pulling on the power cable. Always grip plug firmly and pull straight out from the socket.
- All electrical repairs must be carried out by qualified engineers. Inadequate repairs may be dangerous.
- DANGER OF FERMENTATION: Keep alcoholic beverages in airtight bottles or containers.
- For safety, always clean up any spillages inside or outside of the appliance.
- Do not damage any parts of the appliance which carry refrigerant by piercing, perforating, crushing, twisting or scraping. If the refrigerant comes into contact with the eyes, it may cause serious eye injury.
- Do not obstruct or cover the ventilation aperture.
- Do not allow children to play with your Cooler, or to sit on it or hang onto the door.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

***Caution**:* Flammable refrigerant used! When handing, moving and use of the refrigerator, make sure to avoid either damaging the refrigerant tubing, or increasing the risk of a leak.

Caution: The component parts shall be replaced with like components and that servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.

PRODUCT DESCRIPTION

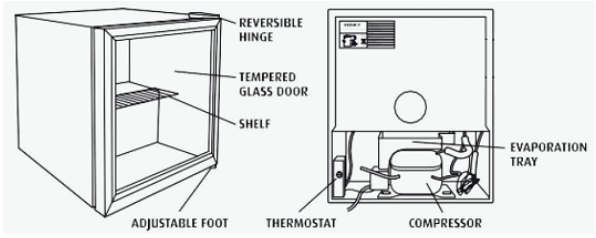

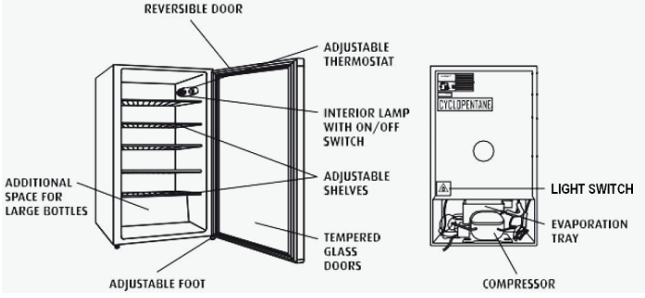

HUCombinedalldomesticmodelsmanual1117.indd4 30/11/201709:19

REVERSING THE DOOR HINGE

The door can be opened from left to right and vice versa. Should you wish to change the opening direction, please follow these instructions.
Note: all parts removed should be kept safely.You will require these for the installation of the door.

- Remove the two screws (1) that hold the upper hinge (5) (right side) to the frame.
- Lift the door o ffand place on a padded surface to prevent scratching.
- Remove the blanking plug (8) from the hole in the upper left corner of the door and transfer it to the uncovered hole on the upper right corner. Press firmly to secure it.
- Remove the two screws (6) that hold the lower hinge (2)
- Remove the adjustable front left foot and transfer it to the other side.
- Remove the bolt pin(7) from the lower hinge (2) and reverse the direction of the lower hinge. Secure the lower hinge (2) to the left side of the lower frame with the two screws(6)Re-insert the bolt pin (7). Set the door into position, making sure it is seated comfortably on to the lower hinge (2).
- Holding the door closed, secure the upper hinge (5) into the top frame with the two screws (1).Check the door is level and tighten the screws firmly.

HOW TO MINIMIZE THE ENERGY CONSUMPTION OF YOUR EXCELLENCE COOLER

- Energy consumption will be lower if the unit stands in a well ventilated space and in particular if vent at the back of the unit is clear of obstruction.
- Do not place the appliance in direct sunlight or near a heat source such as ovens, radiators, heaters, etc. as this will increase energy consumption.
- Keep the door closed as much as possible.
- Setting the thermostat cooler (towards the highest number on the dial) means higher energy consumption, so set only as cool as you really require.
- Do not overfill the cabinet - overfilling means that the cool air cannot circulate freely inside the cabinet which may slow the process of cooling and make the cabinet less efficient.
- Defrost the appliance if frost can be seen building up inside - frost will increase energy consumption and make the cooling process slower.
- Turn the appliance off completely if it is not required for a period of days or longer to avoid wasting energy (see also section ‘When not in use’).

BASIC OPERATION

Your Excellence Cooler must stand on an even, flat surface for quieter operation.
If the appliance is to be placed on carpet, support it with a wooden board underneath. Be aware that placing the appliance on carpet may mean that heat from the compressor may cause the carpet to fade.


SPECIFICATION

- Electrical parameters: 115 V 60 Hz
- Ambient: 27 °C (81 °F)

HUCombinedalldomesticmodelsmanual1117.indd5 30/11/201709:19


SETTING THE THERMOSTAT – COUNTERTOP MODELS

The controller is positioned on the external back wall of the appliance.
The settings 1 (MIN) – 5 (MAX) regulate the interior temperature.
Setting 1 (or MIN) = lowest setting (warmest internal temperature)
Setting 5 (or MAX) = highest setting (coldest internal temperature).

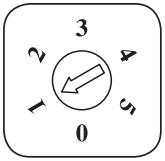

SETTING THE THERMOSTAT – UNDERCOUNTER MODELS

The controller is positioned on the interior side wall of the appliance. Thermostat “0” position indicates the appliance is turned off although power is still connected. By turning the thermostat dial clockwise, the appliance will turn on automa ti cally. The settings 1 (MIN) – 7 (MAX) regulate the interior temperature of the appliance.

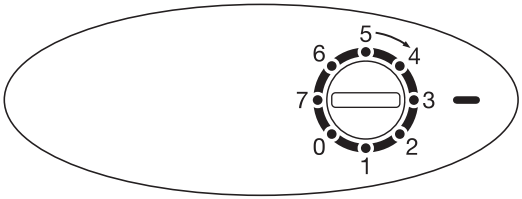

Setting 0 = Off (not operating)
Setting 1 (or MIN) = lowest setting (warmest internal temperature)
Setting 7 (or MAX) = highest setting (coldest internal temperature).

WARNING

If the thermostat is set to too cold a setting, beverages may become frozen. In extreme circumstances, glass bottles may even break. Always exercise caution when setting the temperature.



- Do not place heavy items (more than 20kg/44lbs) on top of the cooler.
- Do not place any items on top of the cooler which may fall off when the door is opened.
- After the unit has been unplugged ,leave for three minutes before plugging it in again.

LIGHTING

ENSURE AT ALL TIMES THE COOLER IS DISCONNECTED FROM THE ELECTRIC POWER MAINS WHEN ATTEMPTING TO CARRY OUT THIS PROCEEDURE

Your Cooler is fitted with a LED light strip positioned in the top of the unit. To replace simply release the cover screws, remove the clear cover and twist the light strip out. Replace the strip in the same way replacing the cover after. To Switch your lights on and off the light switch is situated on the outside rear left hand side of the cooler (see image on page 4) .

TO DO SO MAY RESULT IN ELECTRICAL SHOCK OR PERSONAL INJURY.

HUCombinedalldomesticmodelsmanual1117.indd6 30/11/201709:19

WHEN NOT IN USE

If the unit is not being used for long periods:

- Unplug your Excellence Cooler.
- Clean and dry the inside of the appliance. Leave the door slightly open to allow it to dry completely.
- A cooler which is unused without being cleaned may start to smell musty or develop mildew.

DEFROSTING

- The surface of the evaporator ices up when the cooler is working. This is an entirely normal part of operation. If the frost layer is more than 3mm/⅛" thick, the cooler must be defrosted and cleaned to avoid unnecessary energy consumption and inefficient operation.

1. Remove all items inside and unplug the unit.
2. After defrosting, clean the unit (see instructions below) and allow it to dry.

CLEANING

1. Unplug your Excellence Cooler.
2. Dry all surfaces thoroughly.

Note: Do not use abrasive cleaners!

To ensure efficient operation the back and bottom of the cooler should be cleaned thoroughly. Use mild soapy water to clean the door seal.

MOVING YOUR EXCELLENCE COOLER

- Unplug the appliance
- Remove all items inside
- Adjust the appliance's front foot bolt, so it is easy to push.


Note: Never hold the appliance by the door.

POWER FAILURE

- If a power cut occurs, do not open the door more often than necessary in order to conservecoldair.

CHANGE THE TEMPERATURE DISPLAY DEVICE

Power off the appliance, Use straight screwdriver dismantle the temperature display device and change its battery.

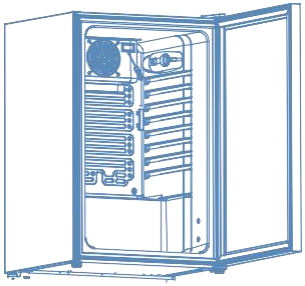

HUCombinedalldomesticmodelsmanual1117.indd7 30/11/201709:19

TROUBLESHOOTING

Before returning your Excellence Cooler to the store, check the following points; you may be able to solve any problem yourself.

Problem	Solution
The cooler does not work properly.	• Check power cable is connected and fuse is intact. • Wrong temperature selected. Adjust setting on the thermostat (see pages 5-6) • Cooler is overfilled. • Appliance exposed to direct sunlight or a heat source. • Door is opened too often.
The cooler's internal temperature is too high or too low.	• Check temperature control. • The cooler does not have the correct clearances at the sides/back. • The door is being opened too often. • The door is not closing completely.
The cooler is noisy in operation or makes unusual noises.	• The appliance is not on a level, firm surface or may be touching other items. • Note: It is normal to hear refrigerant flowing as the compressor stops and starts.
Outer surfaces are wet	• Water source or leak too near the appliance – dry surfaces thoroughly and move the appliance.
Inner surfaces are wet	• Door opened too often or kept open too often.

WARRANTY

Please refer to your warranty card supplied with this unit.

HUCombinedalldomesticmodelsmanual1117.indd8 30/11/201709:19