Excellence Industries

Profit from the Power of Partnership.

DIRECTIONS

MCS – School Milk Cooler

INSTRUCTIONS

Congélateur




General Instructions
Carefully examine the cabinet for shipping damage before discarding the packing material. If any damage is found, contact the delivery carrier immediately and have their agent prepare an inspection report for the purpose of registering a claim. THIS IS YOUR RESPONSIBILITY.

Positioning
The cabinet should be positioned on a firm, flat floor, and must not be exposed to direct heat from radiators, sunlight or other sources of heat. The cabinet emits heat while it is running, and this heat is expelled through the grating found at the sides of the cabinet and under the cabinet. Consequently, there must be a gap of at least 10 cm (4") on all four sides of the cabinet. If the cabinet is placed in a recess, placed beneath a working surface, etc., there must be a gap of at least 10 cm behind and above the cabinet.

It is important for the unit to remain upright and not tilted as the oils from the compressor will affect the cooling system. If the unit is tilted, let it stand upright for a full 24 hours prior to plugging the unit in.

Use
Before using the appliance, it should be cleaned thoroughly. A weak solution of soap and water is recommended. Scouring powder must **not** be used.

Once cleaned, setting the temperature is the only operation needed. The temperature can be adjusted by using the thermostat button located at the back of the cabinet.

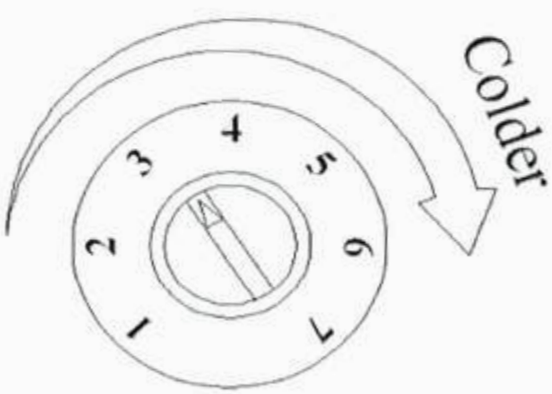

Start by positioning to figure 5 on the thermostat button. Place a thermometer approximately 10 cm (4") inside the cabinet a foot above the floor and check the temperature once it has reached a stable level. Turn the thermostat button clockwise if the temperature is too low or counter-clockwise if the temperature is too high. Once the cabinet has reached the required temperature, it is ready for use.

Note: This equipment is intended for the storage of milk products

Electrical Requirements
The power supply to the cabinet must conform to all national and local electrical codes. A separate circuit is recommended for each cabinet to prevent loss of product if another appliance on the same circuit causes supply failure.

Note: The supply voltage must not vary more than ten percent from that shown on the data plate located on the rear side of the cabinet. If there's any doubt, contact an authorized electrician.

Never use an extension cord.

WARNING

- Before removing the plate to the compressor compartment, switch off the appliance and remove the plug from the socket. For your safety, authorized personnel should only service the appliance. The manufacturer refuses to accept responsibility for any injuries or damage sustained due to unauthorized service or alterations to the appliance.

Maintenance
The units cool by convection by utilizing coils that encircle the perimeter of the unit behind the inside walls. During the refrigeration process a thin layer of frost may build up on the inside walls during the "on" cycle. The frost should melt during the "off" cycle. The remaining water should be cleaned regularly. There is a drain to assist with excess water removal. Be sure to place container under the drain tub located under the unit to avoid a spill.

If the inside of the cabinet needs to be cleaned, the power should be switched off at the main switch so the layer of frost can melt before cleaning.

The unit has a condenser that can collect dust. The collection of dust will reduce the ability to transfer and ultimately damage the compressor. The condenser should be cleaned regularly by an authorized service technician.

Breakdown
If the current supply to the cabinet has been disconnected, it should not be reconnected until 6 minutes have passed. Unless the delay is observed, the compressor will not be able to start.

The cabinet has been thoroughly tested prior to dispatch; however, if breakdowns occur, please check the following points before reporting:

1. Is the main current disconnected?
2. Has the main switch been switched on?
3. Is the plug connected correctly?
4. Is the thermostat button set correctly?

Other defects	**Check the following**
Compressor not running	Has it been switched off at the main switch? Has the fuse blown? Is the socket switched on? Is the plug properly in place?
The temperature is too high	Is the thermostat correctly adjusted?

	Check and adjust as described in "Use" section. Is the frost layer too thick?
The compressor runs continuously	Is the thermostat correctly adjusted? Check and adjust as described in "Use section." Is the ambient temperature too high? (Ensure there's ample air circulation around the appliance.)

If you have checked the above points and the appliance is still not working satisfactorily, please contact your authorized service agent.

Destruction
It is the responsibility of the appliance owner to ensure that the destruction of the appliance is carried out in accordance with safety and environmental requirements.

VIZ: Doors shall be removed, and together with any locking device, be destroyed separately from the appliance. An authorized refrigeration engineer shall remove the refrigeration system, and components including refrigerant and compressor oil delivered to a recycling center.

The equipment is intended for use in an area where the environmental conditions are controlled and maintained so that the ambient temperature typically does not exceed 80°F (27°C).

STAJAC INDUSTRIES, INC.
3710 Corporex Park Drive, Suite 100
Tampa, Florida 33619
813-870-0340

Standard Warranty
Applies Only Within the Continental United States

Stajac Industries Warrants to the User
FIRST YEAR – The cabinet and all of its parts shall be free of defects in the material and workmanship under normal use and service for a period of one year from the date of installation. Stajac Industries' sole obligation under this warranty shall be limited, at its option, to either repairing or replacing any part of the cabinet determined by Stajac to be defective.

ADDITIONAL FOUR YEARS – The cabinet shall be free of insulation failures and refrigerant leaks within the insulated area of the cabinet for a period of five years from the date of installation or six years from the date of manufacture, whichever occurs first. Stajac's sole obligation under this warranty shall be limited, at its option, to either repairing or replacing any part of the cabinet determined by Stajac not to be as warranted.

The Stajac Standard Warranty and Compressor Warranty do not Cover
LABOR COSTS – Stajac shall not be responsible for any labor costs including but not limited to labor costs required to analyze the condition of the cabinet or its parts or labor costs incurred in the repair or replacement of any portion of the cabinet or its parts.

TRANSPORTATION COSTS – Stajac shall not be responsible for parts or assemblies which, upon inspection, are determined by Stajac to have been subjected to misuse, neglect, alteration, accident, abuse, damage during transit or delivery, or by fire or flood.

CONSEQUENTIAL DAMAGES – IN NO EVENT SHALL STAJAC BE LIABLE FOR SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, FOOD SPOILAGE OR PRODUCT SPOILAGE CLAIMS, NOR FOR ANY DELAY IN THE PERFORMANCE OF THIS WARRANTY DUE TO CAUSES BEYOND ITS CONTROL.

General
The standard warranty and any service contract related to the STANDARD WARRANTY shall apply only to the products sold and used within the boundaries of the Continental United States.

Users may file warranty claims either directly with Stajac or with immediate seller from whom the cabinet was purchased. All claims must be supported by information

concerning the alleged defect and specifically identified by the Serial Number of the cabinet.

THERE ARE NO OTHER WARRANTIES, EXPRESS, IMPLIED, OR STATUTORY, EXCEPT THIS WARRANTY, WHICH IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING, TO THE EXTENT PERMITTED BY LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

FOUR-YEAR WARRANTY CONTRACT (OPTIONAL AT ADDITIONAL COSTS)

In addition to the Stajac Standard Warranty and in accord with the purchase of the optional Four-Year Compressor Contract, Stajac agrees to replace the compressor with a compressor of like or similar design and capacity if it is determined by Stajac that the compressor is inoperative due to defects in factory workmanship or material under normal use and service.

Stajac's obligation under the Four-Year Compressor Warranty Contract shall be limited to a period not to exceed five years from the date of installation. The Four-Year Compressor Warranty does not apply to any part of the cabinet or its finish, nor does it apply to the control relay fan or any electrical component.
Further terms of the contract cannot be considered valid if the compressor has been subjected to an accident, alteration, abuse, misuse, or damaged by flood, fire, or acts of God. The Standard Warranty and the Four-Year Compressor Warranty Contract shall place no liability on Stajac for any labor or labor costs in replacing the compressor, heat exchanger, drier, or replaceable parts of the cabinet. Stajac shall only be obligated to furnish the replacement compressor.

Do Not Drill Holes in Cabinet

Refrigeration tubing and wiring is routed through the cabinet walls. Leaks, wet insulation, or electrical problems caused by drilled holes are not covered by warranty.